
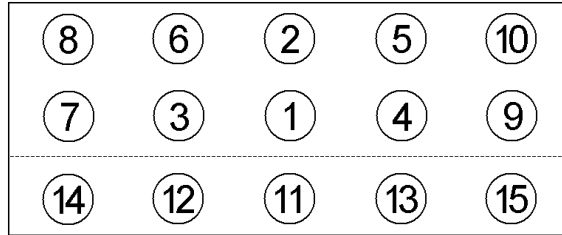


<b>Anziehvorschrift für Zylinderkopf</b>	<b>986.381</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Fiat</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



760.510  
M 12 x 134



Anziehen/ Tightening/ Serrage/ Apriete	M 12	M 8
☼	50 Nm	30 Nm
➤	100 Nm	
➤	90°	
➤	90°	

**Zeichenerklärung / Explanations / Explication / Explicacion**

☼	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	afojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

∅: 83 mm;  $\frac{1}{16}$ : 1,75 mm

Mot: AR 33601, AR 67501  
146.B2.000, 146.D7.000, 149.A1.000,  
149.B1.000, 149.B3.000, 149.B4.000,  
149.B4.046, 160.A6.000, 160.A6.046,  
160.A7.000, 160.B6.046, 160.D1.000,  
176.A3.000, 176.A5.000, 176.B3.000,

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*986.381\***