
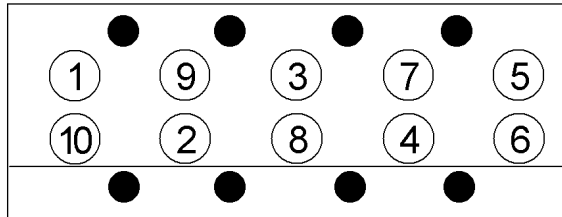


<b>Anziehvorschrift für Zylinderkopf</b>	<b>521.347</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
passend für / suitable for adaptable à / adaptable a		<b>Alfa Romeo</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/ Tightening/ Serrage/ Apriete	POS. 1-10 (M 14)	(M 12)
☼	29 Nm	☼ 25 Nm
➤	50°	50 Nm
➤	50°	88 Nm
*	20 min	* 20 min
●	210 min	● 210 min
➤	30°	☐ 30°+88 Nm

**Zeichenerklärung / Explanations / Explication / Explicacion**

☼	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	afojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

1,59/1,50 mm ÷  
  
VM TD 1995 ccm/2393 ccm/2500 ccm  
  
Alfa 90 TD 2,4 / Alfa 75 TD 2,0  
Alfetta TD 2,0 / Giulietta TD 2,0

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*521.347\***